



**APPLICATION FORM: LPUNEST |
B.TECH - 2024
APPLICATION NO: A24246683**

Paste Your Recent
Passport Size
Photograph
Here

Review Details				
First Name	Arpit	Surname	Jaiswal	
Gender	Male	Email ID	jaiswalraa12@gmail.com	
Mobile Number	+91-9670096777			
Do you have LPUNEST Kit / Application Number / Prospectus /Scratch Code?			No	
Do You Want Hard Copy Of LPUNEST Kit ?		No		
General Information				
Date Of Birth	03/04/2007	Aadhar Card Number	270775052158	
Category	OBC/BC			
Contact Information				
Address: Pratapgarh, U.P., india Ranjeetpur chilbila, Post-Madhoganj, Pratapgarh, Uttar Pradesh, 230403, India				
Country	India	State	Uttar Pradesh	
District	Pratapgarh	City	Pratapgarh	
Pincode	230403			
WhatsApp Number	+91-9670096777	Alternate Contact Number	+91-9670096777	
Parent's Email ID	arpitjaiswal9526@gmail.com	Parent's Contact Number	+91-8874203872	
Parent's Details				
Mother First Name	Rita	Mother Surname	Jaiswal	
Father's First Name	Ravindra Kumar	Father's Surname	Jaiswal	
Parent's Email ID	arpitjaiswal9526@gmail.com	Parent's Contact Number	+91-8874203872	
Qualification Details (10th)				
10th Qualification From ?	Grade or Percentage	Course Commencement Year	Course Completion Year	
India	79	2021	2022	
10th School/College State	10th School/College District	10th School/College City	10th School/College	10th Board/University
Uttar Pradesh	Pratapgarh	Pratapgarh	Other Saint Xavier	Central Board of Secondary Education (CBSE)
Qualification Details (12th)				
12th Subject	12th Status	Grade or Percentage	Course Commencement Year	Course Completion Year
Non Medical (MPC)	Appearing/Result Awaited		2023	2024
12th Qualification From : India				
12th School/College State	12th School/College District	12th School/College City	12th School/College	12th Board/University
Uttar Pradesh	Pratapgarh	Pratapgarh	Other Saint Xavier	Central Board of Secondary Education (CBSE)
Have You Attended Any Coaching? : No				
Coaching Centre State	Coaching Centre District	Coaching Centre City	Coaching Centre Name	

Exam Information			
Slot To Be Booked By	NA	Mode of Exam	Remotely Proctored exam from home
Test State	NA	Test City	NA
1st Date Preference		2nd Date Preference	

SCHOOL NAME

*Physics investigatory
project*



NAME:

CLASS: **XII**

ROLL NO:

SESSION: **2023-24**

C E R T I F I C A T E

This is to certify that

Student Name

*has successfully completed her Physics project
titled*

INTERNAL RESISTANCE OF A CELL

under the supervision and guidance of

PHYSICS TEACHER

*in the partial fulfillment of the Biology
practical*

KNOWLEDGE CYCLE
*assessment conducted during the
academic year*

2023-2024.

EXAMINER

TEACHER

ACKNOWLEDGEMENT

I would like to express my immense gratitude to my physics teacher **TEACHER NAME** for the help and guidance he/she provided for completing this project.

I also thank my parents who gave their ideas and inputs in making this project. Most of all I thank our school management, for providing us the facilities and opportunity to do this project.

Lastly, I would like to thanks my classmates who have done this project along with me. Their support made this project fruitful.


-STUDENT NAME

INDEX

CONTENT	PAGE NO.
Certificate	2
Acknowledgement	3
Topic	5
Introduction	6
Internal Resistance	7
Practical Analysis	8
Theory	9
Procedure	10
Observation	13
Result	14
Precaution	15
Bibliography	16

TOPIC

To study the various factor on which the Internal Resistance/e.m.f. of cell depends

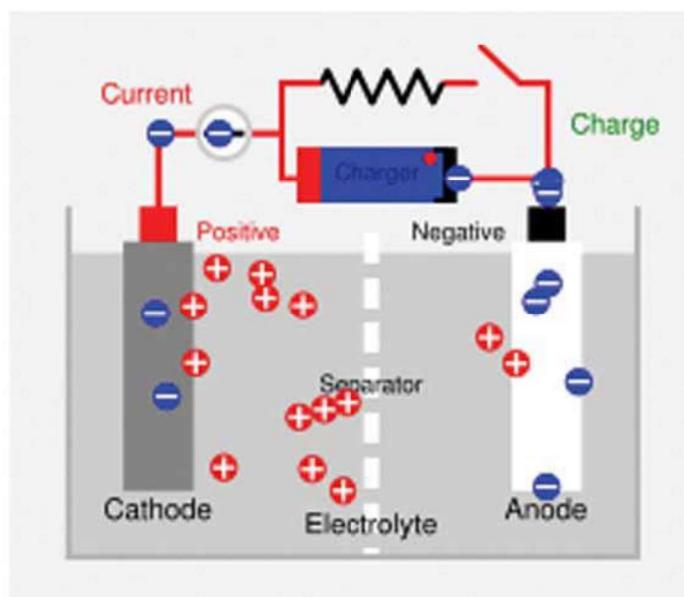


INTRODUCTION

There is a great need of batteries in our daily use electronic appliances and the use is increasing every day. Thus, the batteries need to be made more powerful so that their potential can be increased greatly.

Thus, this project report is based on practical analysis for the factors affecting the internal resistance of a cell.


When the internal resistance of the cell is decreased we can increase the potential difference across it, and hence make it more reliable.

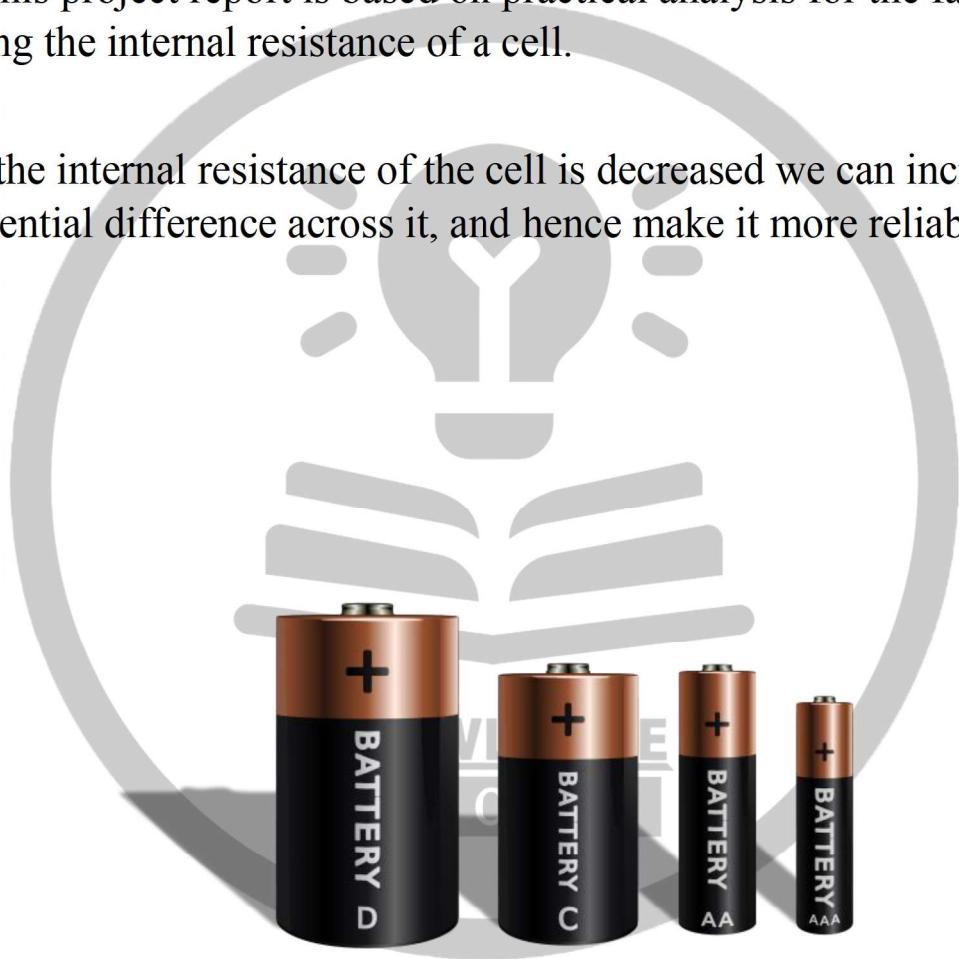

INTERNAL RESISTANCE

Internal resistance is defined as the resistance offered by the electrolyte of the cell to the flow of ions.

- It's S.I. unit is **Ohm (Ω)**

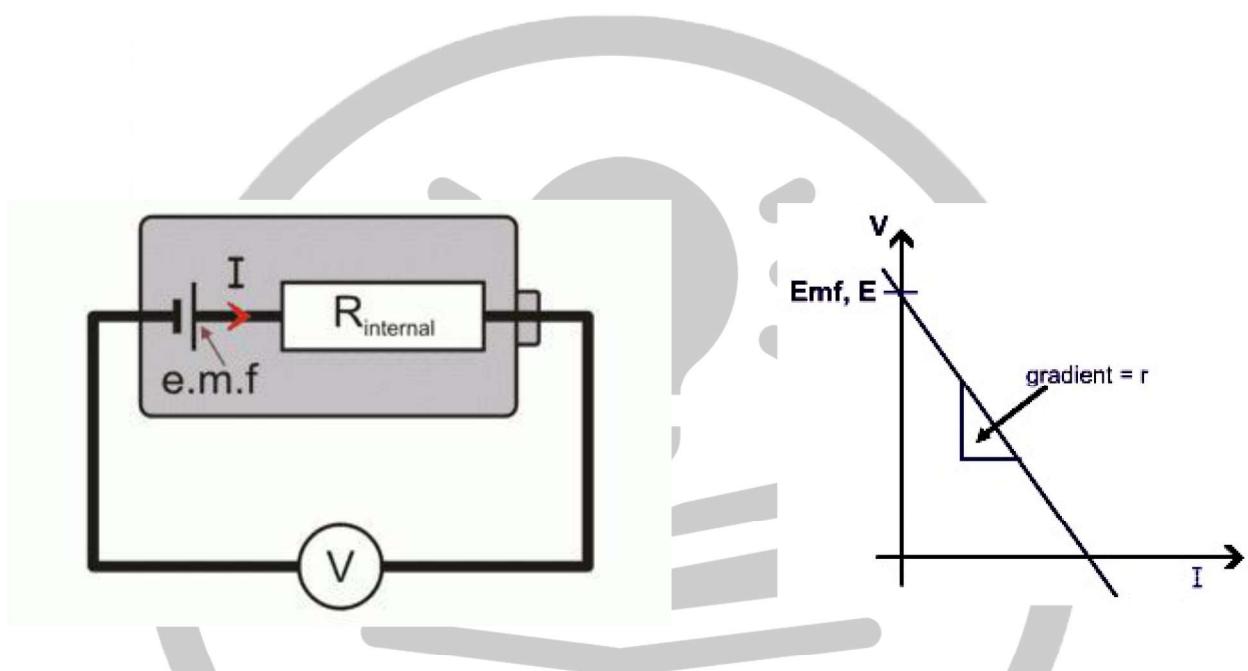

For a cell of e.m.f. (E) and internal resistance (r), connected to an external resistance (R) such that (I) is the current flowing through the circuit.

$$E = V + Ir$$

$$\text{Internal Resistance } (r) = \frac{E-V}{I}$$

PRACTICAL ANALYSIS

OBJECTIVE

To study the various factors on which the internal resistance of a cell depends.

APPARATUS

Potentiometer

Battery (or battery eliminator)

Two one-way keys

Rheostat

Galvanometer

Resistance box


Ammeter

Cell (Leclanche cell)

Jockey

Setsquare

Connecting wires and sand paper.

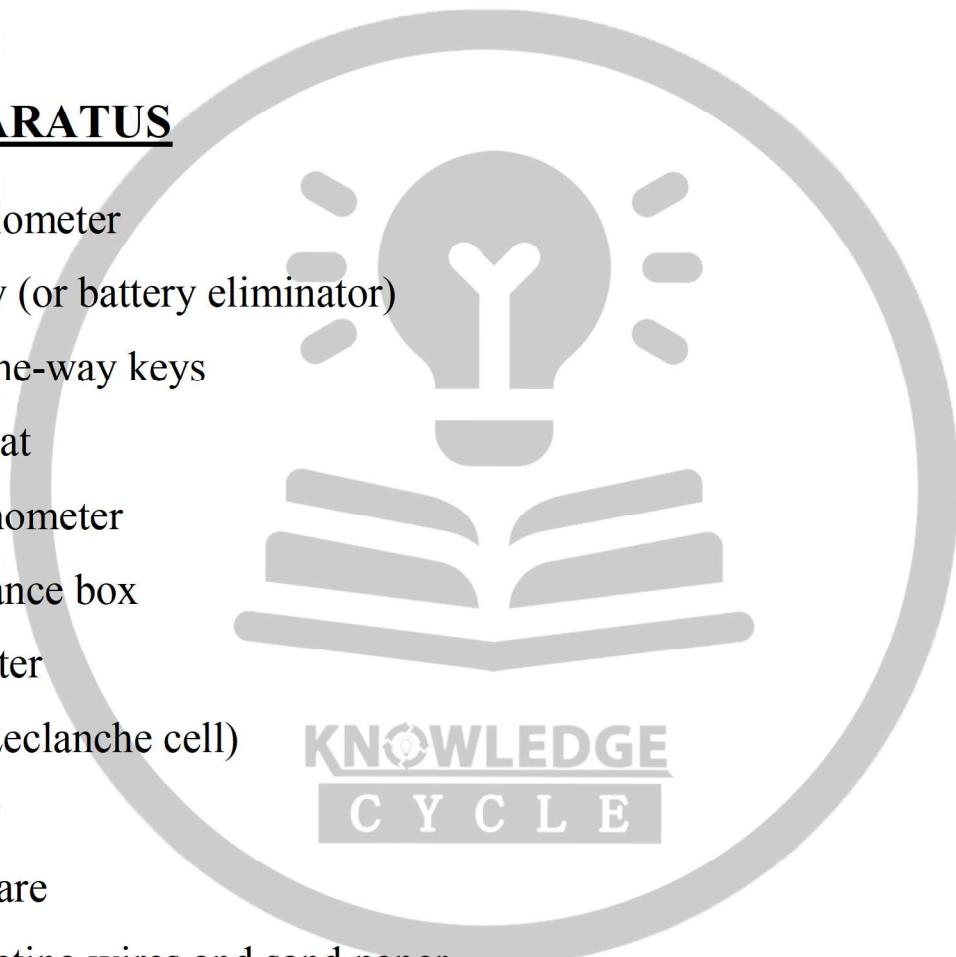

THEORY


The internal resistance of a cell is the resistance offered by its electrolyte to the flow of ions. The internal resistance of a cell

- Is directly proportional to the distance between the electrodes.
- Is inversely proportional to facing surface area of the electrodes in electrolyte.
- Decreases with increase in temperature of electrolyte.
- Is inversely proportional to concentration of electrolyte.

The internal resistance of a cell is given by:

$$r = \frac{E - V}{R}$$

CIRCUIT DIAGRAM

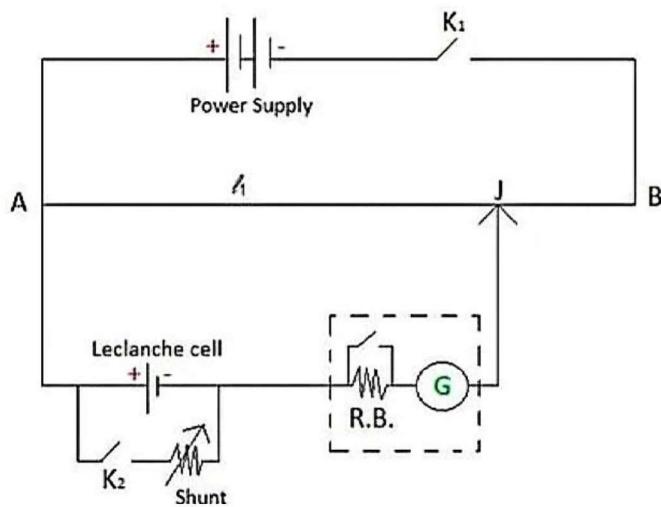

PROCEDURE

- Clean the ends of the connecting wires with sand paper and make tight connections according to the circuit diagram.
- Tighten the plugs of the resistance box.
- Check the e.m.f. of the battery and of the cell and make sure that e.m.f. of the battery is more than that of the cell, otherwise null or balance point will not be obtained.

To study variation of internal resistance with distance of separation

- Keep both the electrodes at a distance of 16 cm.
- Take maximum current from the battery, making rheostat resistance small.
- Without inserting a plug-in key K_1 , adjust the rheostat so that a null point is obtained on the last wire of the potentiometer.
- Determine the position of the null point accurately using a set square and measure the balancing length (l) between the null point and the end P.
- Next introduce plugs in both keys K_1 and K_2 . At the same time, take out a small resistance (1-5 W) from the shunt resistance box

connected in parallel with the cell.

- Slide the jockey along a potentiometer wire and obtain the null point.
- Measure the balancing length (l_2) from end P. Record these observations.
- Now keep the electrodes 12 cm apart.
- Then remove the plugs of keys K₁ and K₂. Wait for some time and repeat steps 7 to 10.
- Next, keep the electrodes 9 cm apart to obtain another set of observations.

To study variation of internal resistance with area of electrodes

- Keeping all other factors constant, increase the area of electrodes in the electrolyte by dipping them into the electrolyte at different depths for each observation.
- Obtain three such observations by repeating steps 7 to 10. Record your readings.

To study variation of internal resistance with concentration of electrolyte

- Keeping all other factors constant, decrease the concentration of electrolyte by adding distilled water for different observations.
- Obtain three such observations by repeating step 7 to 10. Record your readings.

To study variation of international resistance with Temperature

- Keeping all other factors constant, increase the temperature of electrolyte
- Obtain three such observations by repeating step 7 to 10. Record your readings.

OBSERVATIONS

S.no.	Ammeter Reading (A)	Position of null point (cm)		Shunt Resistance R (Ω)	Internal Resistance r (Ω)
		With R (l_1)	Without R (l_2)		
1	0.3	660.5	35.5	1	0.94
2	0.3	660.5	77.2	2	1.77
3	0.3	660.5	108.3	3	2.51

Table for effect of separation between electrodes

S.no.	Separation between electrodes d (cm)	Balancing point l_1 (cm)	Balancing point l_2 (cm)	Internal Resistance r (Ω)	r/d
1	1.2	326.6	276.9	0.456	0.38
2	2.5	320.7	219.1	0.95	0.38
3	3.7	660.5	350.9	1.406	0.38

RESULT AND INFERENCES

- The Electromotive Force of the cell is constant and is equal to $E = 0.98$ Volt.

- The internal resistance of a cell is directly proportional to the separation between the electrodes.

- The internal resistance of a cell is inversely proportional to the area of the electrodes dipped in electrolyte.

- The internal resistance of a cell is inversely proportional to the temperature of electrolytes.

- The internal resistance of a cell is inversely proportional to the concentration of the electrolyte.



PRECAUTIONS

- The connections should be neat, clean and tight.

- The plugs should be introduced in the keys only when the observations are to be taken.

- The positive polls of the battery E and cells E, and E2 should, all be connected to the terminal at the zero of the wires.


- The jockey key should not be rubbed along the wire. It should touch the wire gently.

- The ammeter reading should remain constant for a particular set of observation. If necessary, adjust the rheostat for this purpose.



BIBLIOGRAPHY

- Wikipedia.com
- Google search engine
- Physics NCERT book for class XII

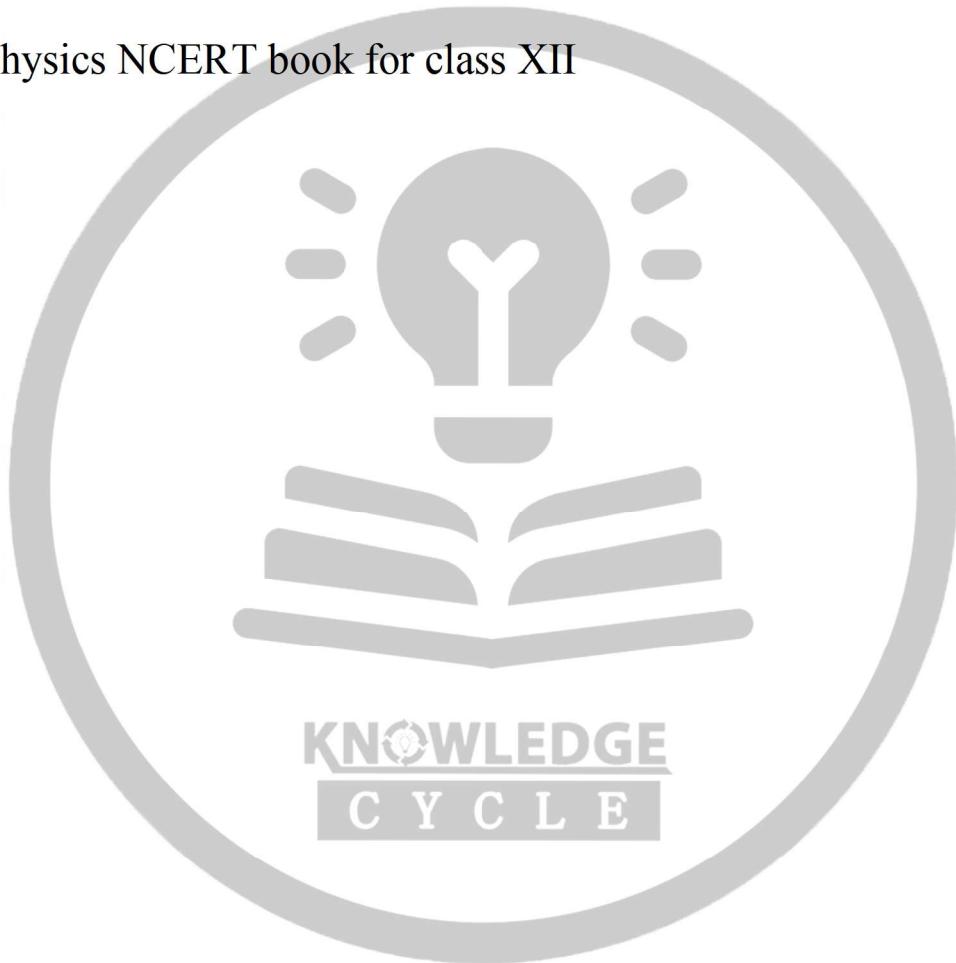

IMPORTANT NOTICE

If You Want A Copy of This Project Without Any Watermark Which Is Chargeable You Can Contact Me on

contact.knowledgecycle@gmail.com

Telegram: @knowledgecycle

Scan the below QR to contact us on WhatsApp

Knowledge Cycle
WhatsApp business account



C Y C L E

PDF COST: ₹79

For more details Visit to this website:

<https://knowledgecycle.in>